


# Chromebook™ Printing with Xerox® Mobile Print Solution

Printing with a Chromebook just got a whole lot easier. Introducing a Chrome™ App that allows any Chromebook to send to any Xerox® and nearly any non-Xerox® MFP.

Introducing a traditional “Print Driver” experience for Google® Chromebooks—the free Xerox® Print Portal App works with a licensed Xerox® Mobile Print Cloud Solution connection.

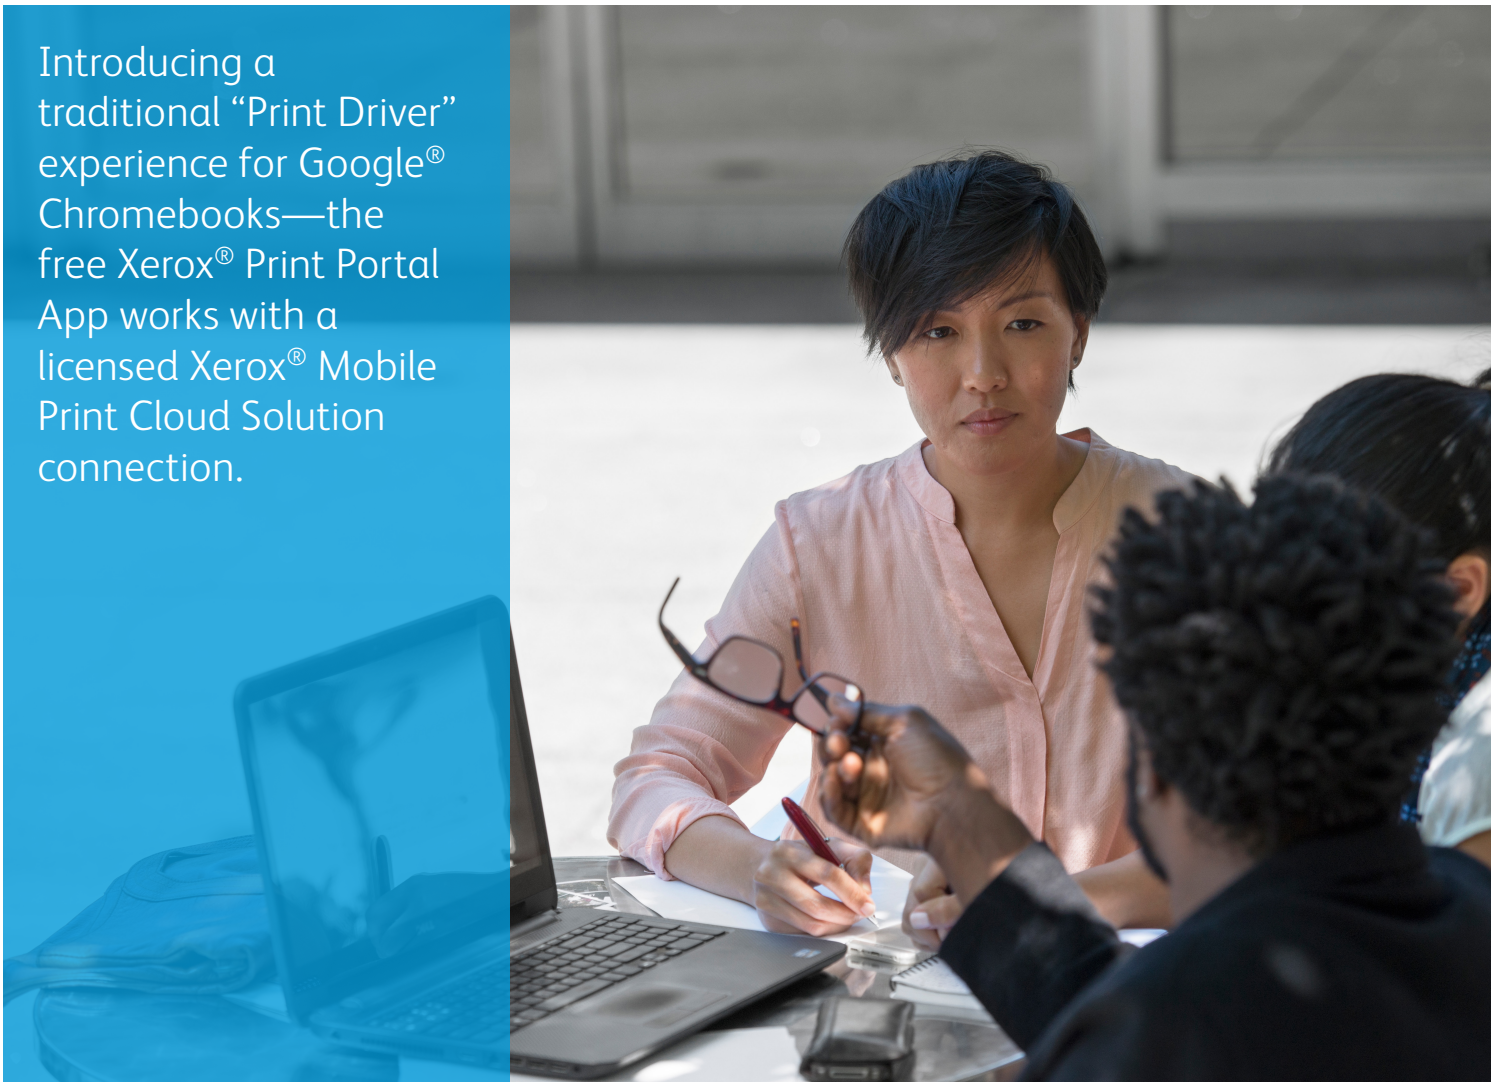

# Chromebook™ Printing— A Traditional Print Driver Experience

A new addition to the Xerox® Mobile Print landscape, the Google Chrome™ Store now carries a Xerox® app that integrates seamlessly with Chrome Operating System (Chrome OS™). This enables a traditional “PC Print Driver” experience for Chromebook users—and allows you to set policies for security, accounting and tracking.

## How the Chromebook App Works

- The app is downloaded from the Chrome App store. This app works and looks like a traditional PC/Mac® Printer Driver.
- The app interfaces with the Xerox® Mobile Print Cloud site or Mobile Print Solution (on-premises). Pre-requisite: A licensed version of Xerox® Mobile Print.
- Integrates in conjunction with Xerox® Secure Print, Xerox® Standard Accounting, Equitrac Office®, Ysoft SafeQ®, Pharos® and more.

The Xerox® Mobile Print Portal requires the use of our Xerox® Mobile Print Solutions currently available on [www.xerox.com/mobile](http://www.xerox.com/mobile) and enables smartphone, tablet, Chrome and Chromebook users to connect with network printers for a simple, convenient and secure method to print.

## What the Chromebook App Can Do

- Print to Xerox®, Fuji Xerox and non-Xerox® multifunction printers including HP®, Ricoh®, Epson®, Canon® and other network print devices.
- Print Adobe® Acrobat®, email, text, Open Office and basic Microsoft® Office formats.
- Select print options such as 1-sided/2-sided, color/black and white, stapled and page range.
- Print documents immediately by selecting a specific Xerox® Mobile Print printer or upload them securely for release later by printing to the Xerox® Mobile Print printer.
- Add and manage the Xerox® Mobile Print printers you want displayed in the Chrome printer selection.

## How to Get Started with the Xerox® Print Portal

1. Obtain your Company Code information for your Xerox® Mobile Print Solution.
2. Download and install the Xerox® Mobile Print Portal App for Chrome. Register and log in to Xerox® Mobile Print using your Company Code and Credentials.
3. Optionally add specific printers to your printer list to print directly from Chrome.
4. Use the native print in the Chrome menu or app (i.e., Google Docs™) to start the print workflow.
5. All printers displayed as selections from the Xerox® Mobile Print Portal client will be shown with a Xerox® Mobile Print label. Select an available printer, printer options and release your document.

## Xerox® ConnectKey®-Enabled Multifunction Printers

- Xerox® WorkCentre® 3655 and 3655i Multifunction Printers
- Xerox® WorkCentre® 5865/5875/5890® and 5865i/5875i/5890i Multifunction Printers
- Xerox® WorkCentre® 5945/5955 and 5945i/5955i Multifunction Printers
- Xerox® WorkCentre® 6655 and 6655i Color Multifunction Printers
- Xerox® WorkCentre® 7220/7225 and 7220i/7225i Color Multifunction Printers
- Xerox® WorkCentre® 7830/7835/7845/7855 and 7830i/7835i/7845i/7855i Color Multifunction Printers
- WorkCentre® 7970 and 7970i Color Multifunction Printers

Visit [www.xerox.com/mobile](http://www.xerox.com/mobile) for more information on Xerox® Mobile.

Print Cancel

Destination XRX0000AAFA0A57 PS  
Change...

Pages  All  
 e.g. 1-5, 8, 11-13

Copies 1 + -

Layout Portrait

Color Color

Options  Two-sided

+ More settings

Demonstration and Discussion  
[xerox.honeycast.com/20161011/](http://xerox.honeycast.com/20161011/)

Works with nearly all Xerox®  
and all Non-Xerox® printers  
and MFPs.